

MILEAGE	10K	15K	20K	25K	30K	35K	40K	45K	50K	55K	60K	65K	70K	75K	80K	85K	90K	95K	100K	105K	110K	115K	120K	125K	130K	135K	140K	145K	150K	155K	160K				
LABOUR / MATERIALS																																			
ENGINE OIL	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R		
OIL FILTER	R		R		R		R		R		R		R		R		R		R		R		R		R		R		R		R		R		
SPARK PLUGS																			R																
AIR FILTER			C/C				C/C				R				C/C				C/C					R				C/C					C/C		
FUEL FILTER											R													R											
ENGINE TUNING																																			
BRAKE FLUID	I		I		I		R		I		I		I		R		I		I		I		R		I		I		I		I		R		
ENGINE COOLANT	I		I		I		I		I		I		I		I		I		R		I		I		I		I		I		I		I		
DRIVE BELT	I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		
COOLING SYSTEM	I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		
ENGINE VALVE CLEARANCE	AUDIBLE INSPECT EVERY 120,000 KM , IF NOISY, ADJUST																																		
EVAPORATIVE SYS. (IF INSTALL)			I				I																I												
BRAKES																																			
PARKING BRAKE	I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		
DISC BRAKE	I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		
BRAKE LINES HOSES & CONNECTION			I				I																	I											
POWER BRAKE UNIT (BRAKE BOOSTER) & HOSE			I				I																	I											
TYRES																																			
ROTATION inc. BALANCING	P		P		P		P		P		P		P		P		P		P		P		P		P		P		P		P		P		
PRESSURE check inc. spare tyre	C/F		C/F		C/F		C/F		C/F		C/F		C/F		C/F		C/F		C/F		C/F		C/F		C/F		C/F		C/F		C/F		C/F		
STEERING ALIGNMENT																																			
STEERING LINKAGES & OPERATIONS	I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		
STEERING LINES, HOSES, CONNECTION & FLUID	I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		
CHASSIS																																			
FRT & RR SUSPENSION, BALL JOINTS							I																	I										I	
FUEL LINES & HOSES			I				I																	I											I
DRIVE SHAFT BOOT							I																	I											I
EXHAUST SYSTEM HEAT SHIELD																								I											I
BOLTS & NUTS ON CHASSIS & BODY			T				T				T				T				T				T				T							T	
REAR DIFF OIL	I		I		I		R		I		I		I		R		I		I		I		R		I		I		I		I		R		
TRANSFER OIL	I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		
ELECTRICAL																																			
BATTERY CONDITION	I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		
ELECTRICAL SYSTEM & LIGHTING	I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		
AIR -CON																																			
CABIN FILTER			R				R				R				R				R				R				R							R	
	R	C/F				I			I/A						C/C				L															P	
REPLACE	CHECK /FILL UP		INSPECTION			INSPECT/ADJUST					CHECK/CLEAN				LUBRICATE																		PERFORM		
FREE CAR WASH & VACUUM																																			