

MAZDA RECOMMENDED MAINTENANCE PROGRAM

Revised: 15.05.10

MAZDA2 Manual

MILEAGE	10K	15K	20K	25K	30K	35K	40K	45K	50K	55K	60K	65K	70K	75K	80K	85K	90K	95K	100K	105K	110K	115K	120K	125K	130K	135K	140K	145K	150K	155K	160K						
<b>LABOUR / MATERIALS</b>																																					
ENGINE OIL	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R				
OIL FILTER	R		R		R		R		R		R		R		R		R		R		R		R		R		R		R		R		R				
SPARK PLUGS																								R													
AIR FILTER			C/C		C/C		C/C		C/C		R		C/C		C/C		C/C		C/C		C/C		R		C/C		C/C		C/C		C/C		C/C				
FUEL FILTER											R												R														
<b>ENGINE TUNING</b>																																					
ENGINE COOLANT	I		I		I		I		I		I		I		I		I		R		I		I		I		I		I		I		I				
DRIVE BELTS	I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I				
COOLING SYSTEM			I				I				I				I				I				I				I						I				
ENGINE VALVE CLEARANCE																								I													
EVAPORATIVE SYSTEM (IF INSTALL)			I				I				I				I				I				I				I										
<b>BRAKES</b>																																					
BRAKE FLUID	I		I		I		R		I		I		I		R		I		I		I		R		I		I		I		I		R				
PARKING BRAKE	I/A		I/A		I/A		I/A		I/A		I/A		I/A		I/A		I/A		I/A		I/A		I/A		I/A		I/A		I/A		I/A		I/A		I/A		
DISC BRAKE	I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		
BRAKE DRUM			I				I				I				I				I				I				I								I		
BRAKE LINES HOSES & CONNECTION			I				I				I				I				I				I				I								I		
POWER BRAKE UNIT (BRAKE BOOSTER) & HOSE			I				I				I				I				I				I				I								I		
<b>TYRES</b>																																					
ROTATION inc. BALANCING	P		P		P		P		P		P		P		P		P		P		P		P		P		P		P		P		P		P		
PRESSURE check inc. spare tyre	I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		
<b>STEERING ALIGNMENT</b>																																					
STEERING LINKAGES & OPERATIONS	I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		
STEERING LINES, HOSES, CONNECTION & FLUID	I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		
<b>CHASSIS</b>																																					
FRT & RR SUSPENSION, BALL JOINTS & WHEEL BEARING AXIAL PLAY			I				I				I				I				I				I				I								I		
FUEL LINES & HOSES			I				I				I				I				I				I				I									I	
BOLT/NUTS ON CHASSIS & BODY			T				T				T				T				T				T				T									T	
CLUTCH FLUID LEVEL	I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		
DRIVESHAFT DUST BOOTS							I								I																					I	
EXHAUST SYSTEM HEAT SHIELD															I																						I
MANUAL TRANSAXLE OIL																																					I
<b>ELECTRICAL</b>																																					
BATTERY ELECTROLYTE LEVEL, SPECIFY GRAVITY & CONDITION			I				I				I				I				I				I				I									I	
ELECTRICAL SYSTEM & LIGHTING	I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I		I
<b>AIR -CON</b>																																					
CABIN FILTER			R				R				R				R				R				R				R									R	
	R		I				I/A				R				P				C/C				R				R								T		
	REPLACE		INSPECTION				INSPECT/ADJUST				PERFORM								CHECK/CLEAN																TIGHTEN		
FREE CAR WASH & VACUUM																																					