



Mazda Motor (Singapore) Pte Ltd  
ROC No.: 199003145M  
1 Kampong Ampat, S 368314  
Sales: 6395 8888  
Service: 6395 8838  
Parts: 6395 8898  
www.mazda.com.sg

Our ref : 410/DK/008/10

3 March 2010


Dear Valued Mazda Customer,

**Re: Proper Usage of Driver's Floor Mat**

We would like to highlight the proper installation and usage of the driver's floor mat in your Mazda:

- 1. Appropriate size and shape**  
Always use floor mats that match the size and shape of your vehicle's floor.
- 2. Prohibition of stacking floor mats**  
Never stack one floor mat over another. Always use the floor mat alone.
- 3. Check floor mat before driving**  
Before driving, ensure that the floor mat does not interfere or overlap with the accelerator pedal even when the accelerator pedal is fully opened, and there is sufficient clearance between the floor mat and the accelerator pedal.

The picture below shows the *incorrect* usage:

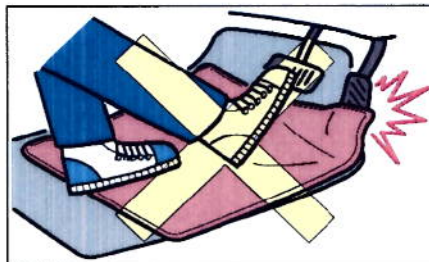

If you have any questions or doubts, please feel free to contact our Service department at 6395-8833 (Macpherson) or 6603-6128 (Alexandra) for more detailed information.

Yours truly,  
Mazda Motor (Singapore) Pte Ltd

Don Khok  
Senior Service Manager